

## INSTALLATION INSTRUCTIONS

1. Damper to be installed per orientation ordered for proper function. Blast pressure closes the damper blades.
2. Damper to be installed square to prevent racking. After installation is complete verify movement of components to insure free and unrestricted movement of damper components.
3. Airflow/Blast direction label on linkage side of damper. Verify label matches actual conditions.

