06/10 - Subject to change. © Belimo Aircontrols (USA), Inc.











•		
<b>Technical Data</b>		AFB24, AFB24-S, AFX24, AFX24-S
Power supply		24 VAC ± 20% 50/60 Hz
		24 VDC +20% / -10%
Power consumption	running	5 W
	holding	2.5 W
Transformer sizing		7.5 VA (class 2 power source)
Electrical connection		
AFB24		3 ft, 18 GA appliance cable, 1/2" conduit
		connector
		-S models: two 3 ft, 18 gauge appliance cables
		with 1/2" conduit connectors
AFX24		3 ft [1m], 10 ft [3m] or 16 ft [5m] 18 GA
		appliance or plenum cables, with or without 1/2"
		conduit connector
		-S models: two 3 ft [1m], 10 ft [3m] or
		16 ft [5m] appliance cables, with or without 1/2"
		conduit connectors
Overload protection		electronic throughout 0 to 95° rotation
Control		on/off
Torque		180 in-lb [20 Nm] minimum
Direction of rotation	spring	
Mechanical angle of rotation		95° (adjustable with mechanical end stop, 35° to
		95°)
Running time		< 75 seconds
	spring	
D 111 1 11 11		< 60 seconds @ -22°F [-30°C]
Position indication		visual indicator, 0° to 95°
		(0° is full spring return position)
Manual override		5 mm hex crank (¾16" Allen), supplied
Humidity		max. 95% RH non-condensing
Ambient temperature		-22°F to 122°F [-30°C to 50°C]
Storage temperature		-40°F to 176°F [-40°C to 80°C]
Housing		Nema 2, IP54, Enclosure Type2
Housing material		zinc coated metal and plastic casing
Agency listings †		cULus acc. to UL60730-1A/-2-14,
		CAN/CSA E60730-1:02, CE acc. to
N		2004/108/EC & 2006/95/EC
Noise level		<50dB(A) motor @ 75 seconds
Comicina		≤62dB(A) spring return
Servicing		maintenance free
Quality standard		ISO 9001
Weight	44:	4.6 lbs (2.1 kg); 4.9 lbs (2.25 kg) with switches
† Rated Impulse Voltage 800V, Typ AFB24-S, AFX24-S	e or action	1.AA (1.AA.B for -S version), Control Pollution Degree 3.
		2 v CDDT 2A (0 EA) @ 2E0 VAC III approved
Auxiliary switches		2 x SPDT 3A (0.5A) @ 250 VAC, UL approved

one set at +10°, one adjustable 10° to 90°

### Torque min. 180 in-lb, for control of air dampers

#### **Application**

For On/Off, fail-safe control of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications. Control is On/Off from an auxiliary contact, or a manual switch.

The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft.


#### Operation

The AFB and AFX series actuators provide true spring return operation for reliable failsafe application and positive close off on air tight dampers. The spring return system provides constant torque to the damper with, and without, power applied to the actuator.

The AFB and AFX series provides  $95^\circ$  of rotation and is provided with a graduated position indicator showing  $0^\circ$  to  $95^\circ$ .

The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches.

The AFB24-S and AFX24-S versions are provided with two built-in auxiliary switches. These SPDT switches are provided for safety interfacing or signaling, for example, for fan start-up. The switching function at the fail-safe position is fixed at  $+10^{\circ}$ , the other switch function is adjustable between  $+10^{\circ}$  to  $+90^{\circ}$ . The AFB24, AFB24-S, AFX24 and AFX24-S actuator is shipped at  $+5^{\circ}$  (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off.

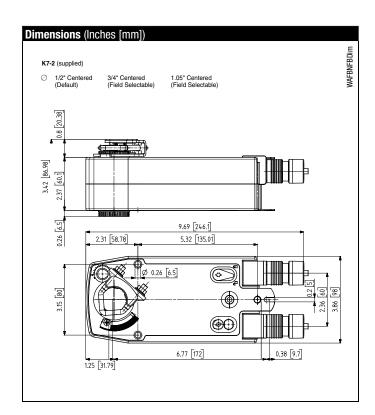



Accessories			
AV 8-25	Shaft extension		
IND-AFB	Damper position indicator		
KH-AFB	Crank arm		
K7-2	Universal clamp for up to 1.05" dia jackshafts		
TF-CC US	Conduit fitting		
Tool-06	8mm and 10 mm wrench		
ZG-100	Universal mounting bracket		
ZG-101	Universal mounting bracket		
ZG-118	Mounting bracket for Barber Colman® MA 3./4, Honeywell® Mod III or IV or Johnson® Series 100 replacement or new crank arm type installations		
ZG-AFB	Crank arm adaptor kit		
ZG-AFB118	Crank arm adaptor kit		
ZS-100	Weather shield (metal)		
ZS-150	Weather shield (polycarbonate)		
ZS-260	Explosion-proof housing		
ZS-300	NEMA 4X housing		

Note: When using AFB24, AFB24-S, AFX24, AFX24-S actuators, only use accessories listed on this page.

For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

#### **Typical Specification**

On/Off spring return damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall be protected from overload at all angles of rotation. If required, two SPDT auxiliary switch shall be provided having the capability of one being adjustable. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus Approved and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

# **Wiring Diagrams**



# C INSTALLATION NOTES



Provide overload protection and disconnect as required.



### **CAUTION** Equipment Damage!

Actuators may be connected in parallel.

Power consumption and input impedance must be observed.



Actuators may also be powered by 24 VDC.



For end position indication, interlock control, fan startup, etc., AFB24-S and AFX24-S incorporates two built-in auxiliary switches: 2 x SPDT, 3A (0.5A) @250 VAC, UL Approved, one switch is fixed at  $+10^{\circ}$ , one is adjustable  $10^{\circ}$  to  $90^{\circ}$ .



# **APPLICATION NOTES**




Meets cULus requirements without the need of an electrical ground connection.

# $\wedge$

# WARNING Live Electrical Components!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

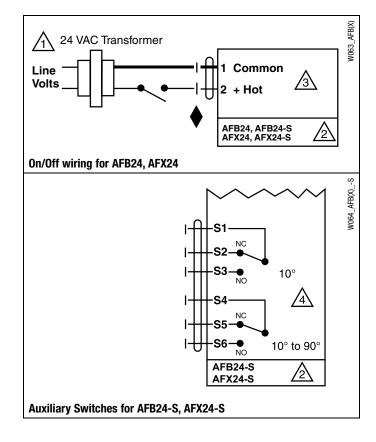

06/10 - Subject to change. © Belimo Aircontrols (USA), Inc.