


INSTALLATION DETAILS
EME6625D/CD50 COMBINATION UNIT
MIAMI-DADE APPROVED

MIAMI-DADE COUNTY, FLORIDA NOTICE OF ACCEPTANCE NUMBER: 06-1205.08 (EXPIRES 1/28/2012)

EME6625D/CD50 HEAD AND SILL DETAIL
(JAMB SIMILAR TO HEAD)

INSTALLATION

1. Place installation channels over the perimeter of the opening.
2. Slide louver(s) into channels from the front.
3. Expand installation channels in opening as much as possible using shims or wedges between louver frames and installation channels.
4. When installation channels are tight against the perimeter of the opening, install 1/4" (6) screws through the installation channel attachment angles into the rear of the louver frames on all sides.
5. Slide damper sleeves on to rear of installation channels as shown.
6. Fasten damper sleeves to installation channels with screws provided.
7. Remove shims and caulk all appropriate joints.

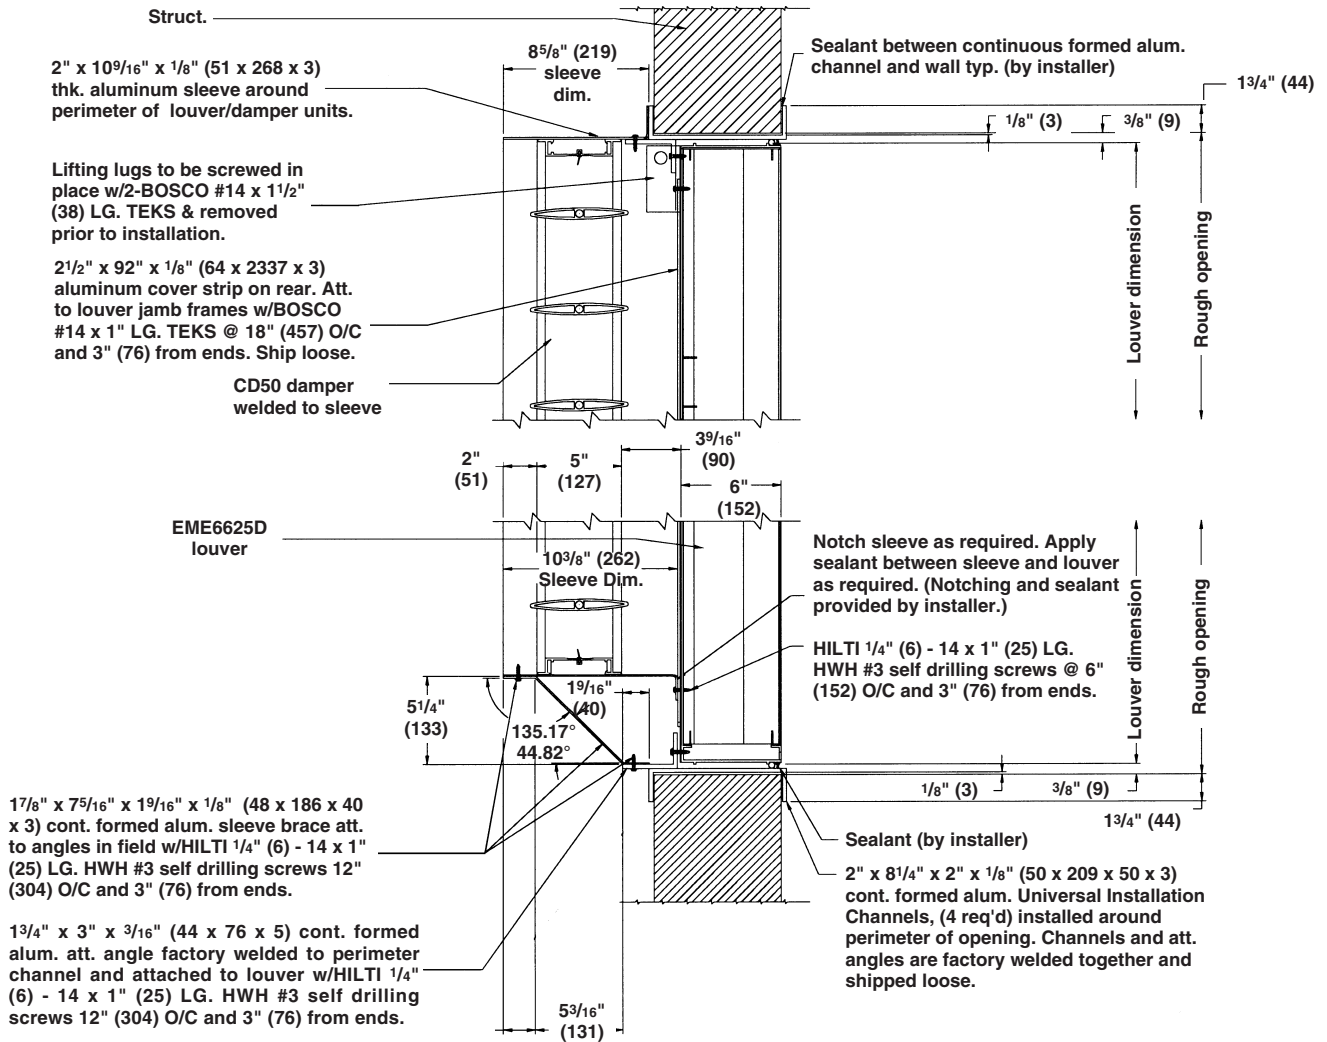

Notes:

1. The installation method indicated must be complied with for Miami-Dade Approval. It is the responsibility of the installing contractor to properly install the louvers per this detail.
2. On special orders, Ruskin may provide submittal and/or shop drawings. Reference these drawings for additional installation information.
3. Louvers wider than the maximum single section width will be shipped in multiple sections and will require field assembly. Field assembly is not by Ruskin.
4. Dampers and louvers are shipped separately and must be combined in the field. Combination of louvers and dampers is not by Ruskin. Sleeves are factory welded to the dampers.
5. Installation channels are shipped loose.
6. Reference Installation Instruction II-EMED-207 for EME6625D louver only installation.