

ADR and ADF ACCESS DOORS

Ruskin ADR and ADF access doors are an inexpensive and trouble-free way to gain access into sheet metal ductwork systems for resetting dampers, cleaning filters, or access for general maintenance. The oval shaped opening permits the back plate or "inner plate" to be easily passed through the duct openings, and the neoprene gasket on the inner plate provides for an absolutely air-tight

seal. The large hand knobs insure a quick method to remove and reinstall the door without the use of special tools. The ADR (for round duct work) and ADF (for flat duct work) are available in three sizes, 16" x 12", 10" x 6" and 8" x 4" to accommodate the many different sizes of duct work that are available.



METAL THICKNESSES

- 20 (.9) gauge steel - 10" x 6" (254 x 152) door size.
- 20 (.9) gauge steel - 16" x 12" (406 x 305) door size.
- 20 (.9) gauge steel - 8" x 4" (203 x 102) door size.

CELLULAR SPONGE GASKET

Fixed to the inner plate keeps the doors free of leaks at pressures to 20" w.g.

ACCESS DOOR MODELS AND SIZES

Ruskin ADF is available in 8" x 4" (203 x 102), 10" x 6" (254 x 152) and 16" x 12" (406 x 305) sizes for rectangular (flat) ductwork. Ruskin ADR is available as the ADR1 size 10" x 6" (254 x 152), the ADR2 size 16" x 12" (406 x 305), and the ADR3 size 8" x 4" (203 x 102) for round duct work in the following sizes:

AVAILABLE OPTIONS

- Aluminum Construction: ADR1 and ADR2 Only.
- 304SS Construction: ADR1 and ADR2 Only.

ADR1, 10" x 6" (254 x 152) DUCT SIZES

6", 8", 9" 10", 12", 14", 16", 18", 20", 22", 24", 26", 28", 30" (152, 203, 229, 254, 305, 356, 406, 457, 508, 559, 610, 660, 711, 762).


ADR2, 16" x 12" (406 x 305) DUCT SIZES

12", 14", 16", 18", 20", 22", 24", 26", 28", 30", 32", 34", 36", 38", 40", 42", 44", 46", 48" (305, 356, 406, 457, 508, 559, 610, 660, 711, 762, 813, 864, 914, 965, 1067, 1118, 1168, 1219).


ADR3, 8" x 4" (203 x 102) DUCT SIZES

4", 6", 8", 9" 10", 12", 14", 16", 18", 20", 22", 24", 26", 28", (102, 152, 203, 229, 254, 305, 356, 406, 457, 508, 559, 610, 660, 711).


ACCESS DOOR CUTAWAY

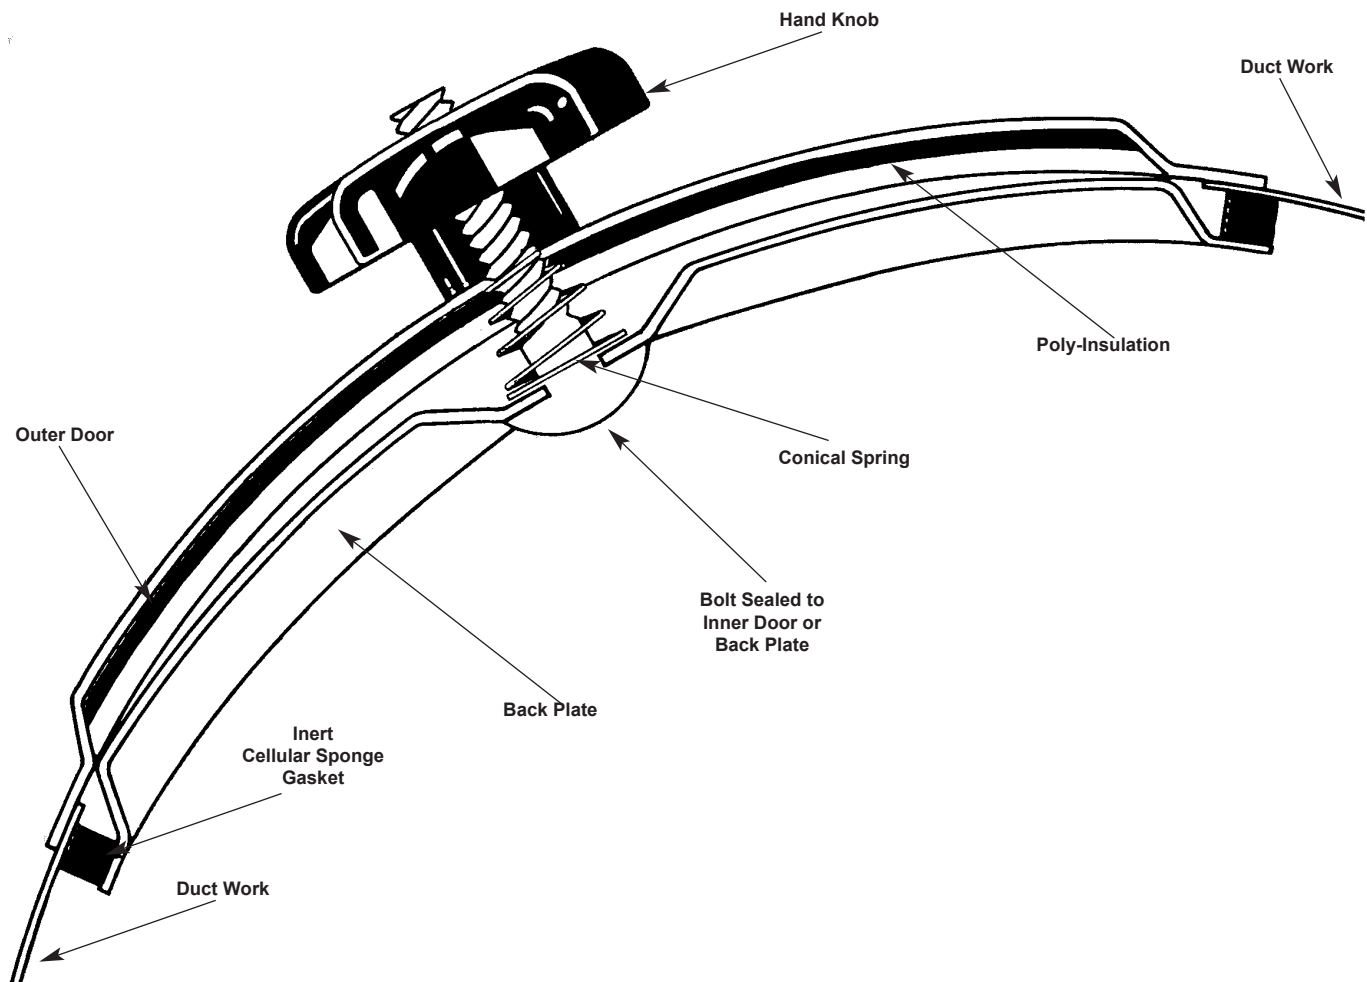

INSTALLATION INSTRUCTIONS

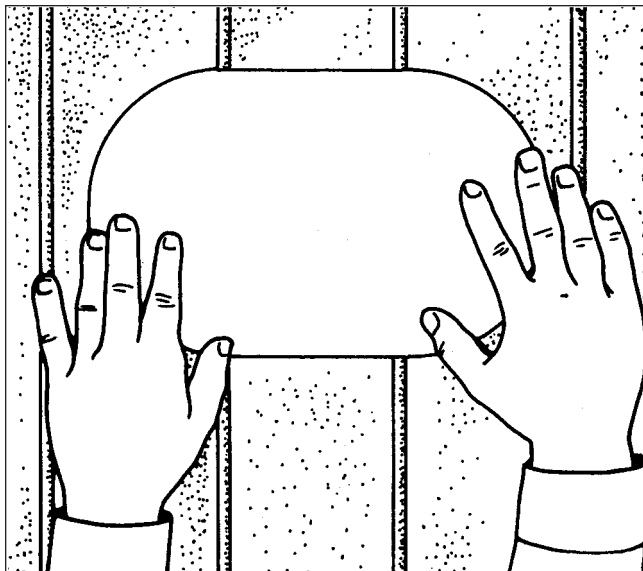

SELF-ADHESIVE TEMPLATES are also provided so that the duct opening can be cut without expensive lay-out.

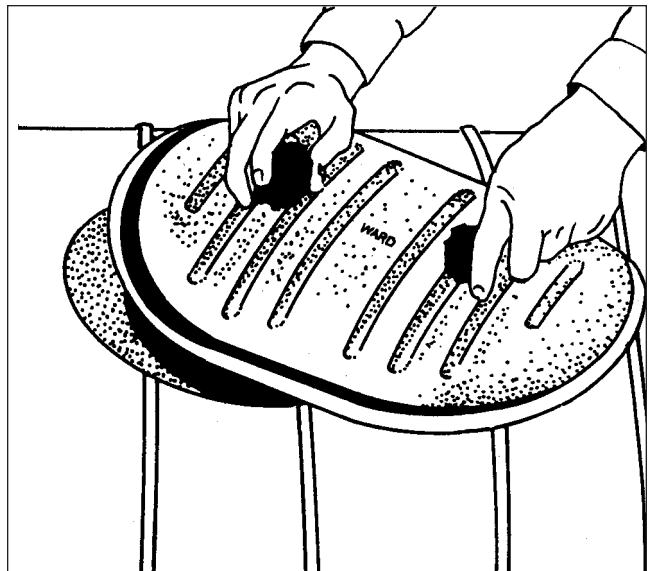

EASY INSTALLATION after door opening has been cut, unscrew handles or door in insert in the opening, align then tighten knobs.

RUSKIN[®]

3900 Dr. Greaves Rd.
Kansas City, MO 64030
(816) 761-7476
FAX (816) 765-8955
www.ruskin.com